



88 Block Installation Instructions

Step 1: Install bracket using hardware supplied, with the side tabs on bottom as shown in detail A.

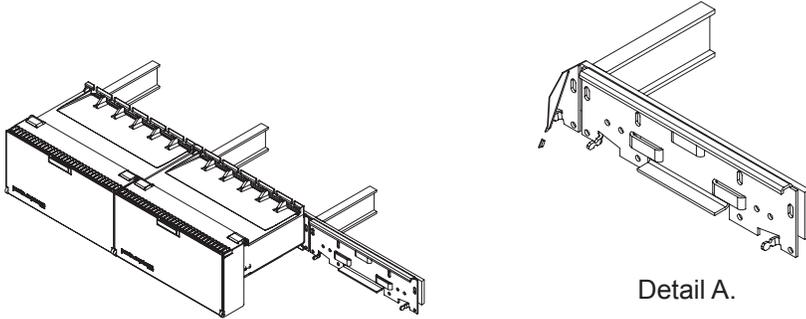


**Mounting Bracket is equipped with universal mounting holes. It may be used with different frames not shown in this drawing.*


Step 2: Tilt 88 Block and insert slot of the block under tab of mounting bracket.

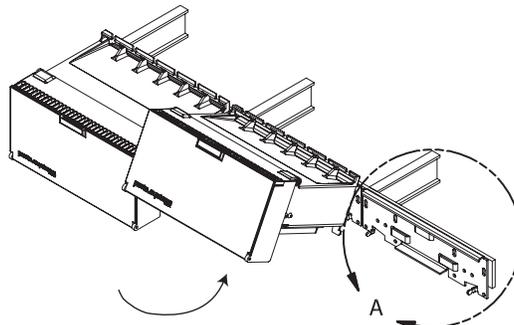

Step 3: Rotate downward to snap onto bottom side tabs.

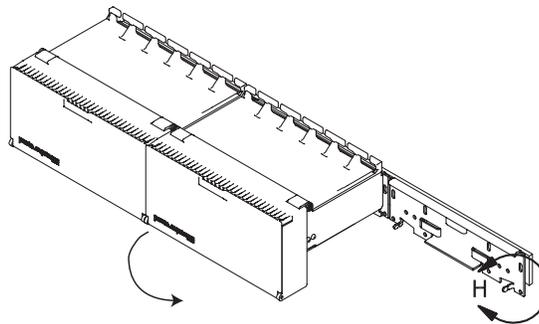


Step 4: Bend bottom side tabs towards inside to prevent movement.

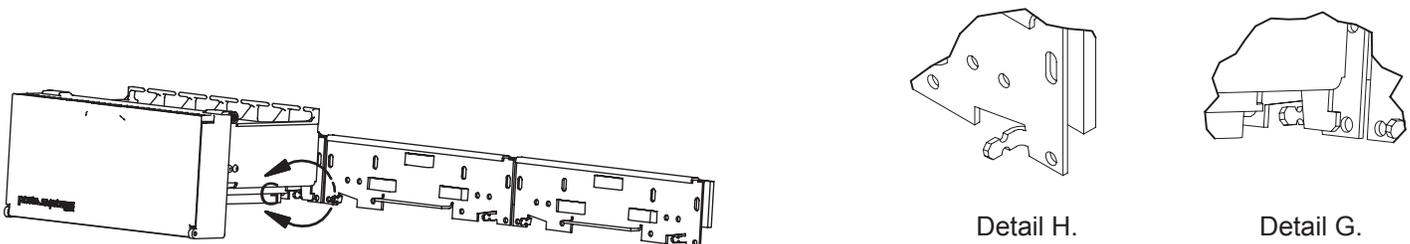

**Once these steps are completed, you can proceed with unit's wiring.*


88 Tablilla Instrucciones de Instalacion

Step 1: Utilizando la tornilleria incluida, instale el soporte de montaje con las cejillas laterales hacia abajo, como se muestra en el detalle A.

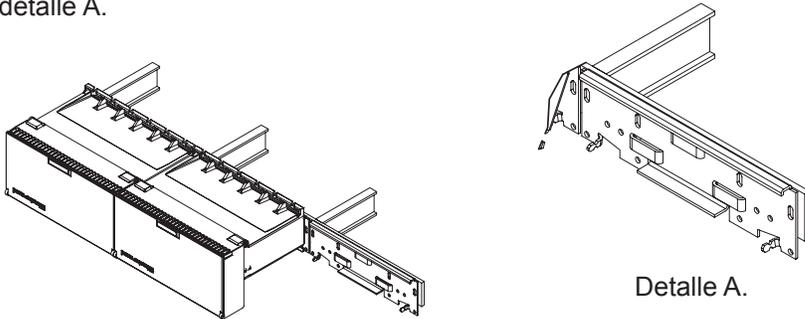


**El Soporte de montaje ya contiene huecos universales para la instalacion. Puede ser usado en diferentes bastidores no ilustrado en este dibujo.*


Step 2: Incline la tablilla e insertela justo debajo del doblez superior del soporte de montaje.

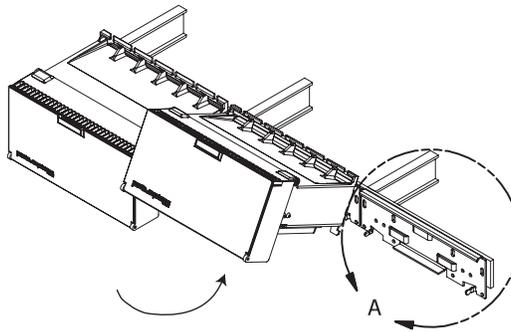

Step 3: Rotela hacia abajo buscando alinear las ranuras inferiores de la pieza con las cejillas del soporte hasta alcanzar una posicion recta.

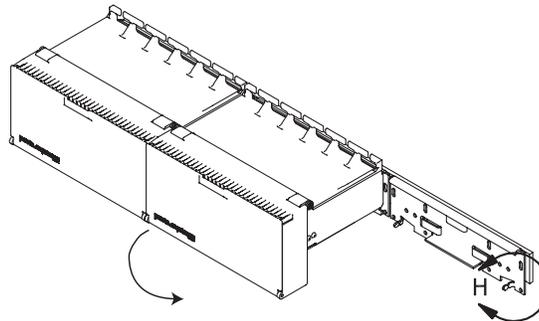

Step 4: Doble las cejillas hacia adentro para prevenir movimiento de la unidad.

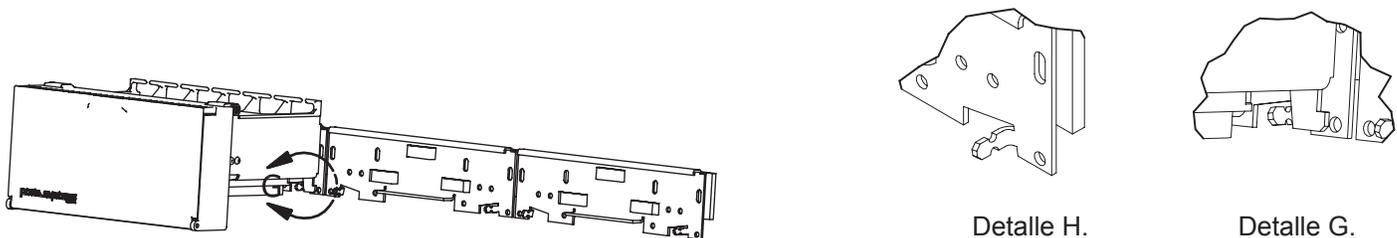

**Completados estos pasos, puede iniciar la instalacion del cableado*