tii network technologies

141 Rodeo Drive
Edgewood, NY 11717
Toll Free 888.844.4720
www.tiinettech.com

Model UVS-12
xDSL POTS Splitter
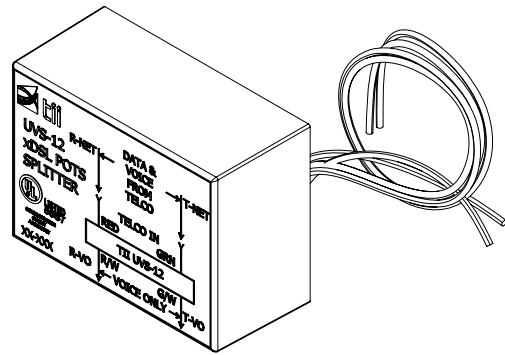
Installation Note

Description

1. The tii UVS-12 xDSL POTS Splitter module maintains a constant direct connection between customer and central office service provider. The tii UVS-12 is supplied with 8 inch long leads for easy installations in confined spaces.
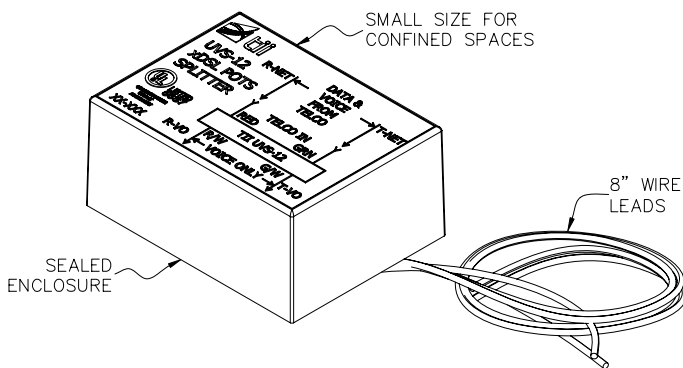
Features

Figure 1

Installation

1. Identify the location where the tii UVS-12 is to be installed.

2. Attach red/green wire pair to the wire pair bringing in DSL/POTS service.

3. Connect red/white, green/white wire pair of the UVS-12 to the customer telephone using the appropriate connector.

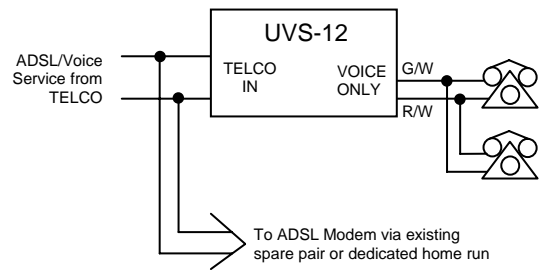4. Attach the DSL modem wires to the red/green wires of the UVS-12.

Figure 2
Wiring Diagram

Central Office Signal Testing

1. Lift the telephone receiver to off hook position

2. Check for the dial tone. If the dial tone is present, splitter UVS-12 has been installed properly.

3. Test and verify the DSL modem operation. The UVS-12 installation is complete.